ML 726 user guide:

Table of Contents

Contents:

1. Notes
2. Accessories
3. Hardware Specifications
4. Startup and shutdown
5. Desktop
6. Button
7. Main Menu Operation
8. System Settings
  * Time and date settings
  * Screen brightness
  * Standby screen
  * WIFI Wireless Connection
9. Install, remove and run the application
10. Touch calibration
11. Network
12. Music
13. Video
14. Picture
15. Wallpaper
16. Recording
17. Mail Client
18. External equipment
   * USB connection
  * OTG use
   * Keyboard and mouse
19. Frequently Asked Questions Treatment

1. Note:

* This product is a high precision electronic product, do not disassemble.
* Avoid strong beat, the collision of the product.
* Avoid using this product the following conditions: high and low temperature, moisture, dust, magnetic fields strong and long-term exposure to sunlight.
* Please use a wet cotton cloth wrung gently wipe the product shell, do not use other chemical cleaning solution. This product should not be dripping or splashing water, so should not be placed near the product category, such as glass filled with a liquid items.
* Too long, use the headphone volume is too large may cause permanent hearing damage.
* Do not cross the road, driving motor vehicle or bicycle use headphones to avoid traffic accidents.
* Please only use permitted batteries, chargers and accessories, use any other type of products would violate the warranty regulations and may be dangerous.
* Please follow the relevant local environmental regulations to deal with obsolete machines and accessories.
* This product is in the course of any questions, please contact your local dealer or directly with the company's customer service center.
* For those because the product is damaged, repair or other causes of memory loss wipe coating, the Company assumes no responsibility, please follow the user manual for standard operation, and timely backups.

2. Accessories:

MID 726 host
9V 1.5A DC charger
USB cable

3. Hardware Specifications:

ML 726 Specifications		
Processor	Tele chip Tcc8902 High-performance ARM 11 processors Frequency 720MHz Support for hardware 2D/3D graphics acceleration	
Memory	DDR2 256MB	
Storage	Built-in flash memory 2GB/4GB/8GB/16GB/32GB Support external TF card, maximum capacity of 32GB	
Wireless	IEEE802.11b / g wireless network	
USB	USB1.1 high speed interface and USB2.0 OTG	
Video Output	HDMI1.3 Full HD Video Output Interface Analog AV composite video output interface	
Audio	3.5mm headphone jack High-quality stereo loud speaker Built-in microphone Headset maximum output power of 40mW Frequency response: 20Hz-20KHz SNR: greater than 90db	
Screen	Size	7 inch
	Resolution	WVGA 800*480
	Color	16 million colors
	Operating	Multiple Touch Panel
Other	Size	193*115*14.3mm
	Color	Black / White / Silver
	Weight	350mg
	Battery	Built-in lithium polymer battery 2400AH

Accessories	Power adapter (DC V / A) HDMI cable (optional) USB Cable Certificate, quick guide and warranty card

4. Startup and shutdown

*Boot: Press and hold the power button, the green LED indicator light, the system will enter the startup process, as follows:

Boot Logo startup ...

System has been started, are entering the Android system:

The system enters the default home interface

*Shutdown: Press the power button, pop-up device options, select Shut Down, as follows:

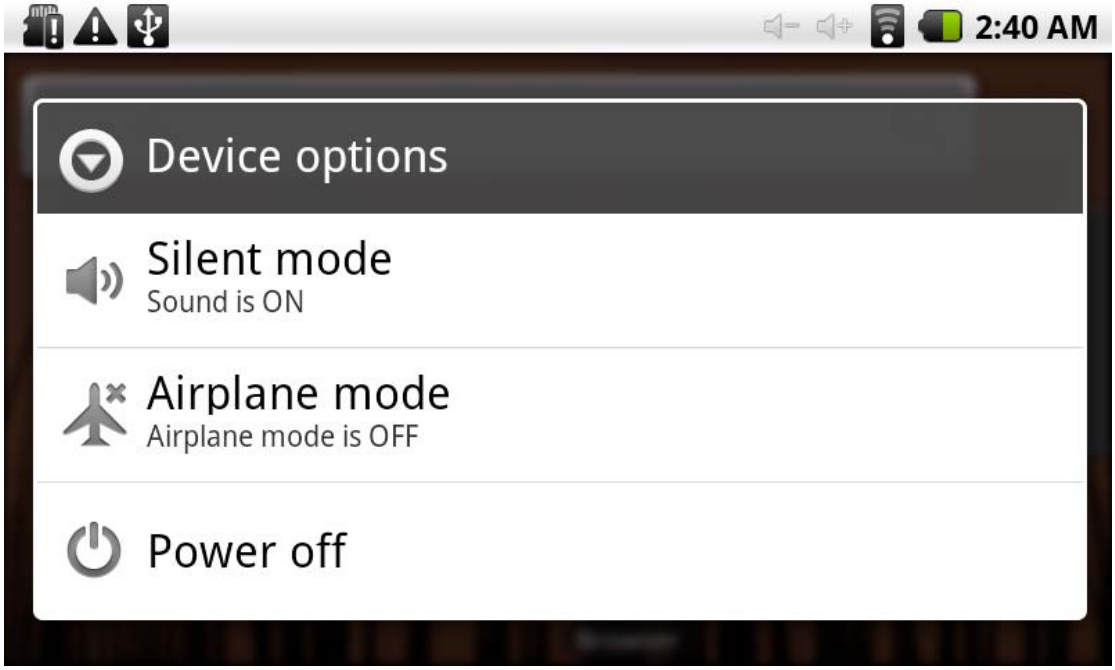

Click OK, you can safely shut down.

*Sleep: the machine under normal operating conditions, Short press the power button, into hibernation, Now, Screen will close. Short press the power button again, is able to resume normal mode. ☒ When the time being use this MID can enable this feature when, to reduce power consumption.

5. Desktop:

System after the completion of normal start, Desktop can see Android 2.1(The figure)

The default desktop by the: Status Bar、Quick Search Bar、Main menu labels and a number of shortcut icons form.

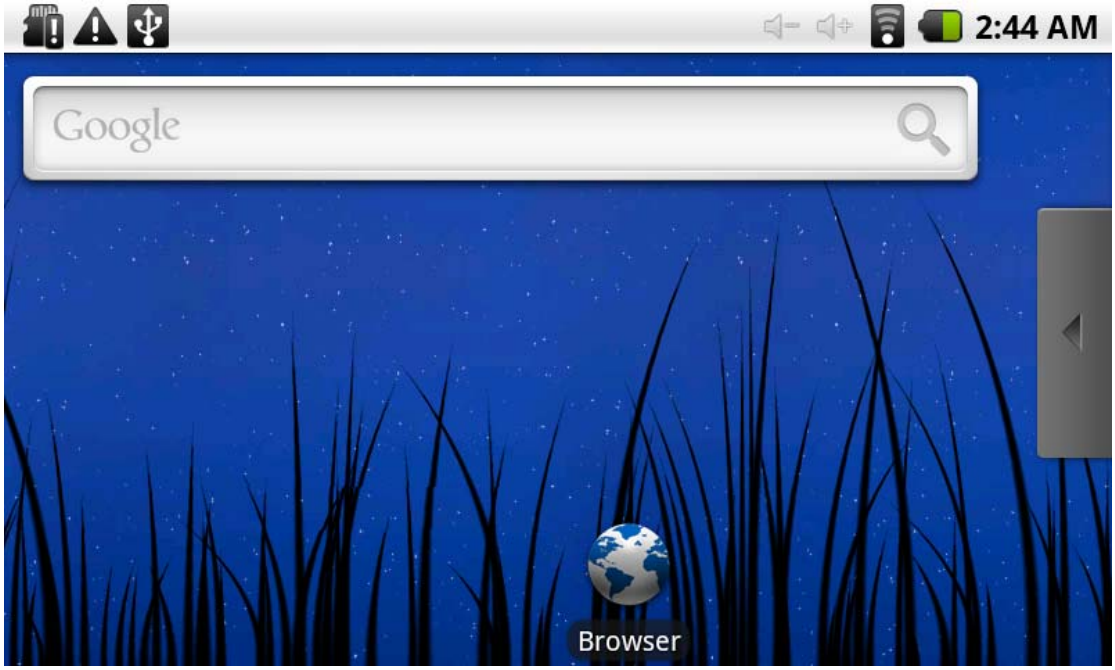

The status bar to display the current system of network status, Battery, Time information. Quick search box for Web search by typing key words. Middle right of the screen the main menu tab stop, Click or drag to the main menu bar to start the default.

Bottom of the screen displaying the browser shortcut icon.

Optimization of the status bar results, Increase the volume of two icons , Volume reduction . Click to adjust the volume. Equivalent to Volume + and Volume – features.

6. Button:

Android system uses in the course of the keys:

Volume keys: the task bar Volume +, Volume-achieve changes in the volume.

Power key: Press and switch machines. Short press to enter or leave the hibernation.

Menu button: Displays the current form of the menu items (if any).

Home button: Back to the main interface or choose.

Return: Return on an interface.

7. Main Menu Operation:

Click or drag the main interface of the main menu tab, the main menu will be from right to left (or bottom-first, last), and is as follows:

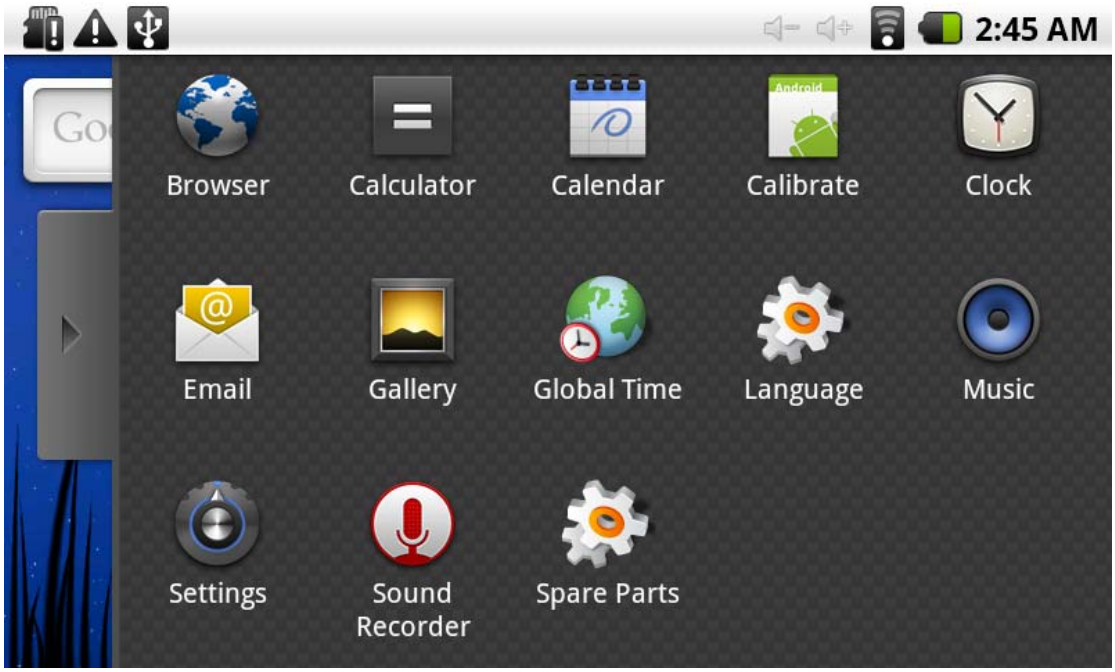

In the main menu, the system can be set to run existing applications, install a new application, start the touch calibration, music player, video player, web browsing, games and other operations.

8. System Settings:

Click the main menu interface in the "Settings" icon; you can open the system settings interface, as shown below:

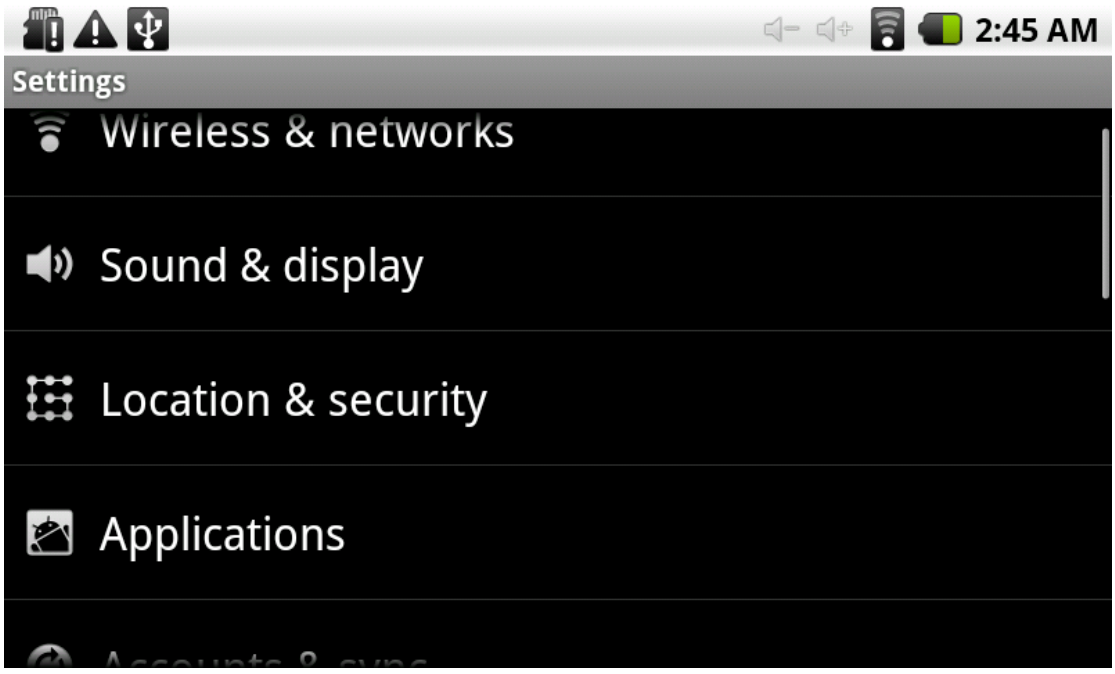

Select the appropriate operation of the relevant items, such as:

* Wireless and network

* Sound and display

* Date and time settings

* About Equipment, Etc.

*Date and time settings:

Set interface options "time and date settings options" to enter the date and time settings interface:

Can choose to automatically: use the Network Time.

Can also select to set the date, select the time zone, set the time, time format, date format and other information.

For example, choose to set the date, as follows:

Select +: that the increase of 1 unit,

Select -: that the reduction of 1 unit.

Also can choose the number, enter the input mode. Directly entering the desired number, then selection is done. As follows:

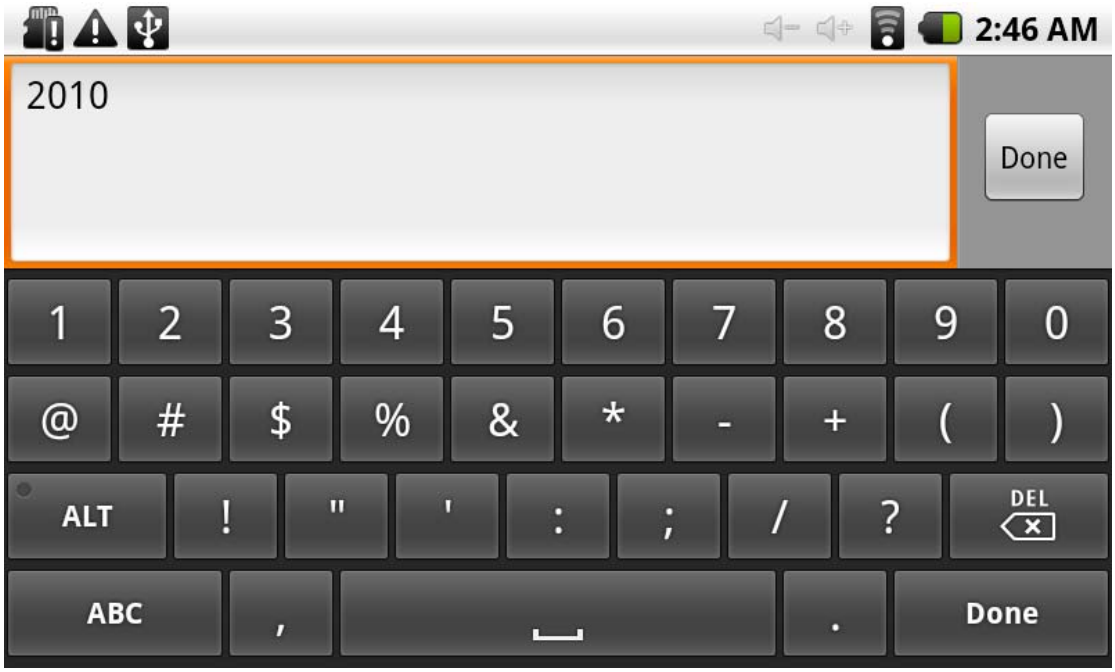

Select "Settings." If you enter the number of legitimate, then the operation is successful, the system will set the option to use the new.

*Screen brightness:

In the setup interface choose "sound and display settings" to enter the sound and display settings interface, scroll down section, select "Brightness", there are interface:

*Standby screen:

Standby screen: the screen automatically locks the delay before.

In the setup interface choose "sound and display settings" to enter the sound and display settings interface, scroll down section, select the "standby screen" interface appears, as follows:

Note: In the video, the screen auto-standby function does not work

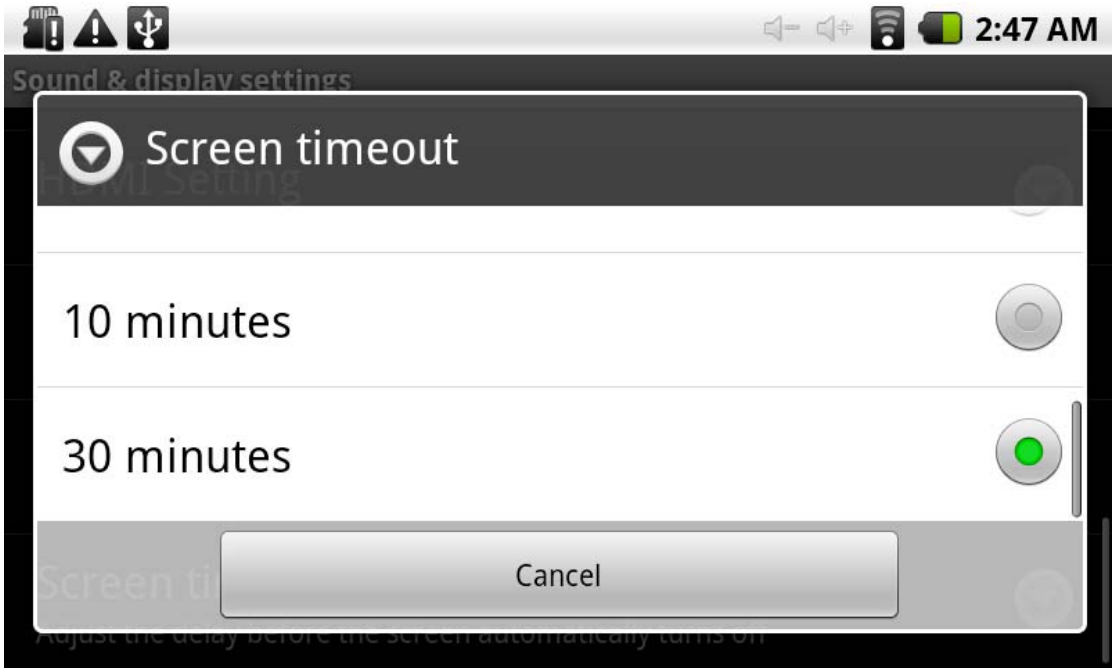

*WIFI Wireless Connection:

Click the main menu "Settings" icon, go to "System Settings" screen, click on "Wireless and network" into the "Wireless and network" setup interface. Click the "WIFI" section to quickly open the WIFI feature, click on "WIFI settings" column enter "WIFI set interface" as shown below:

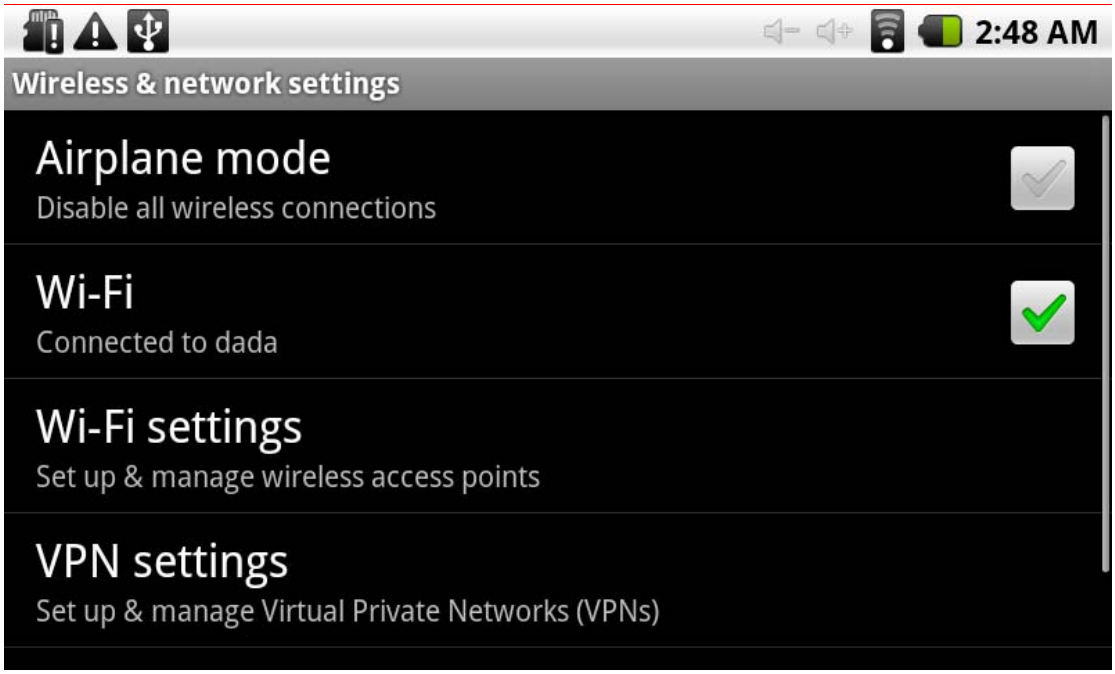

In the "WIFI settings" interface (above), click on the WIFI column also can open and close the WIFI feature, click on the "Network Notice" lists MID726 search to the wireless router, wireless router, click the search name will pop up settings window , please follow the prompts to complete the WIFI network links. Some encrypted network, need to enter a valid key. Link diagram below:

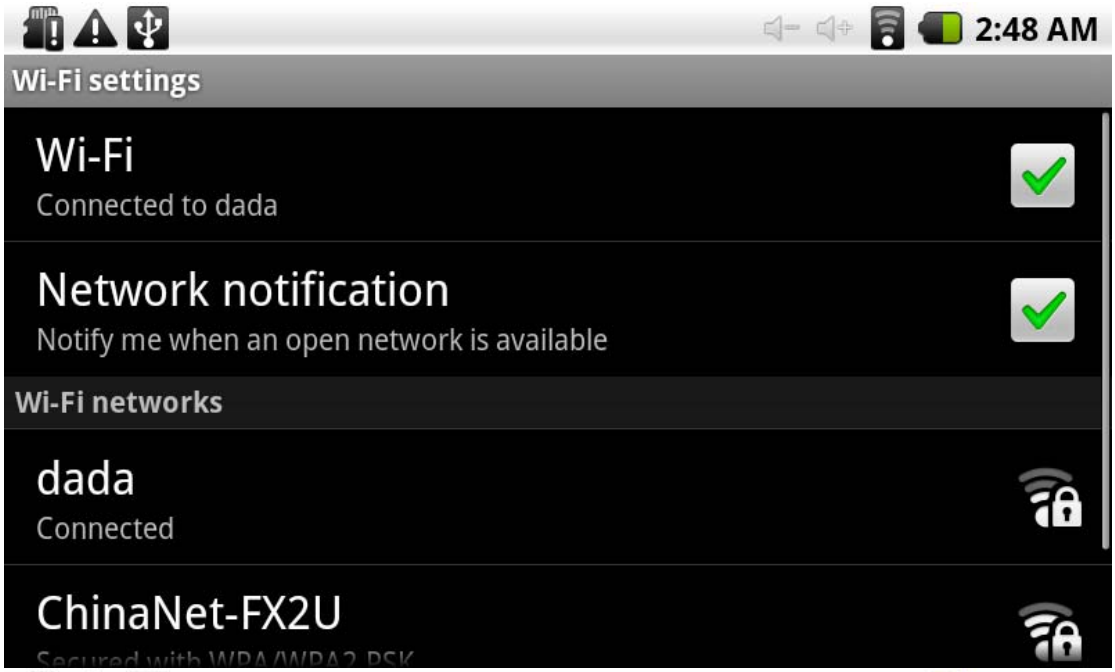

*HDMI 和 TVOUT:

This product supports HDMI output and TVOUT.

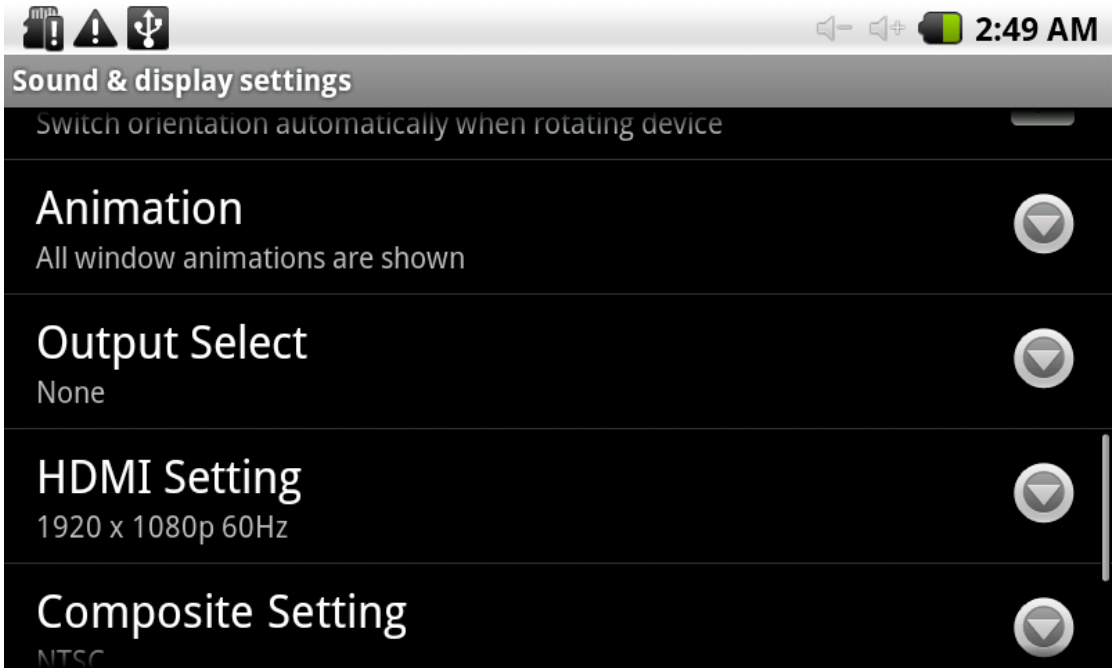

*Using the HDMI cable to connect a HDMI input MID726 and equipment. In the "Settings" / "sound and display" / "Output select" to select HDMI output mode, the system output to HDMI.

If you choose HDMI output, you can "HDMI Setting" which chooses to change the output format. System 1920X1080P 60Hz and 1280X720P 60Hz choice of two formats.

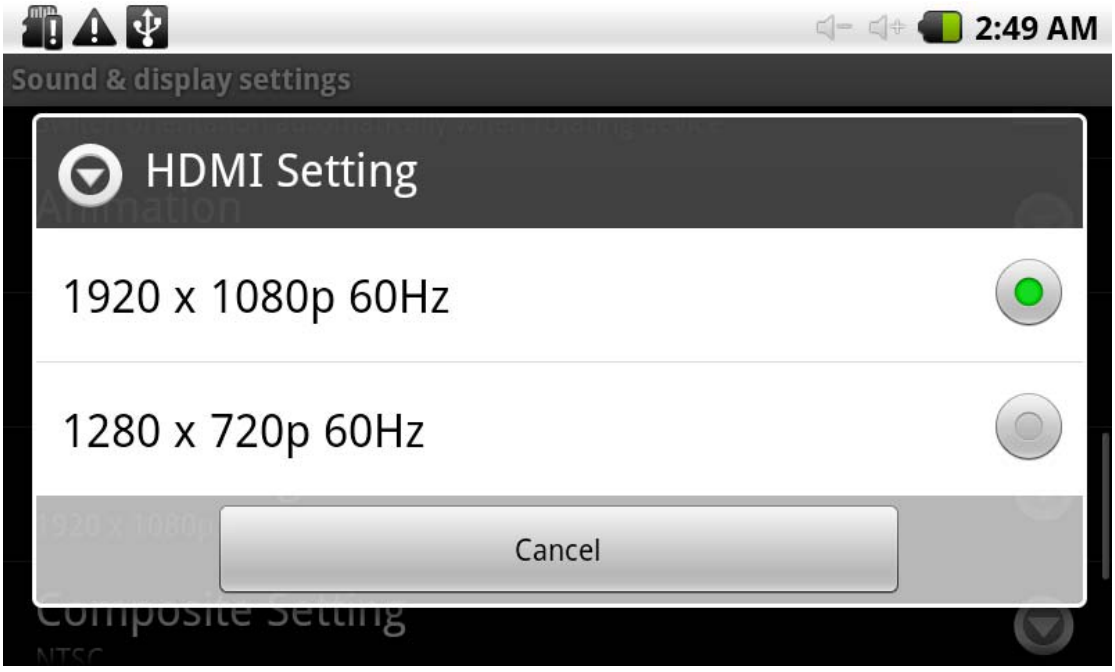

*Through the AV cable to connect MID726 and digital input devices with complex.

In the "Settings" / "sound and display" / "Output Select" select Composite output mode, the system output to AV.

If you choose to AV output, you can "Composite Setting" which chooses to change the output format. System "NTSC", "PAL" choice of two formats.

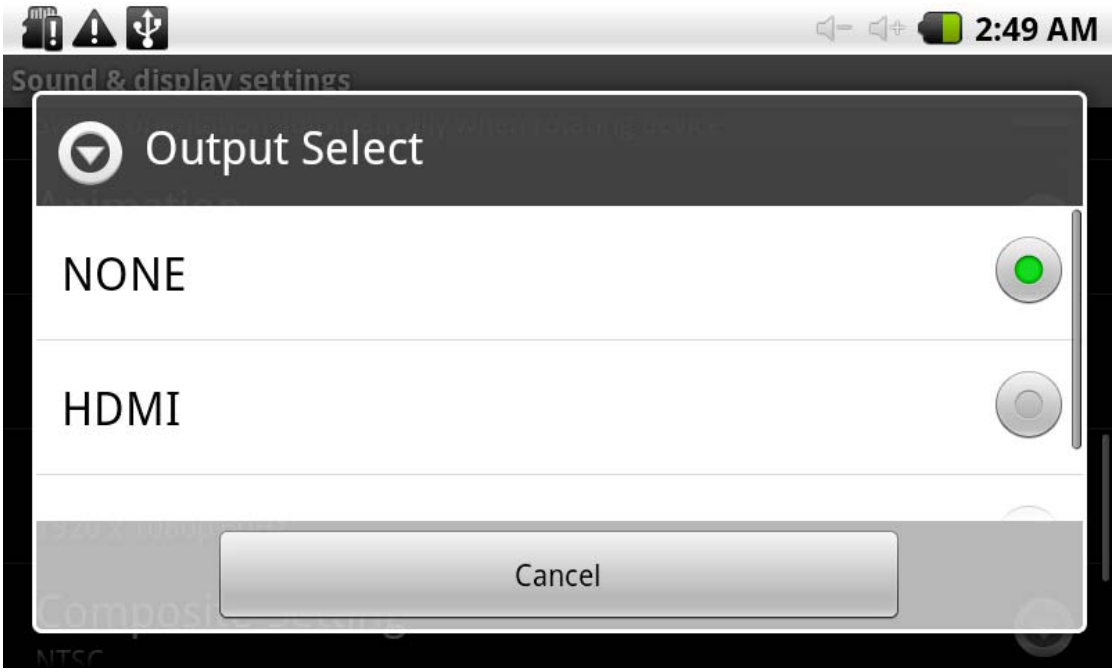

When using the HDMI or Composite output on, LCD will display the contents of the scaled output to external devices at the same time.

9. Install, uninstall, runs the application

*Installation: Android application installation; there are a variety of ways, such as through USB install, install third-party program aid. Here we introduce assisted by APK installer to install.

Click the main menu interface "APK installer" can enter the "application installation and management" interface. As shown below:

Click "Install Installer" install options into the APK interface. In the choice of interface and file browse the directory, find your path to the file storage APK, what you want to APK file into the application installation interface, and click on Install to automatically install the application.

After installation is complete, there will be "open" or "complete" message. Click "Open" to open to install the program directly. Click "Finish" then exit the installation interface. Generally installed in the main menu program to create the corresponding icon. Directly in the main menu you can click on the icon to open the appropriate application.

Users can "Android market" online installation, or download via the computer, or online through the machine built-in browser to download and install.

***Uninstall applications**: You can use the appropriate third-party software management tools or applications that use the Android comes with management software

Select "Settings" / "Application" / "Management Applications", select the appropriate application has been installed, to view program information, the uninstall program and other operations.

10. Touch Calibration

When you first start the system by default called touch calibration procedures. Users can also in the main menu, select "touch calibration", enter the touch calibration procedures.

Follow the prompts to complete the calibration operation, if successful touch calibration, the system prompts and automatically exit the touch calibration interface. As follows:

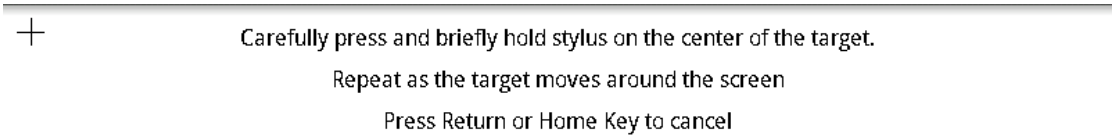
Carefully press and briefly hold stylus on the center of the target.
Repeat as the target moves around the screen
Press Return or Home Key to cancel

11. Network:

Web browsing:

When the connected network, open the Web browser enter the URL, you can quickly browse the Web; or through the main desktop search bar enter the URL, open the web page.

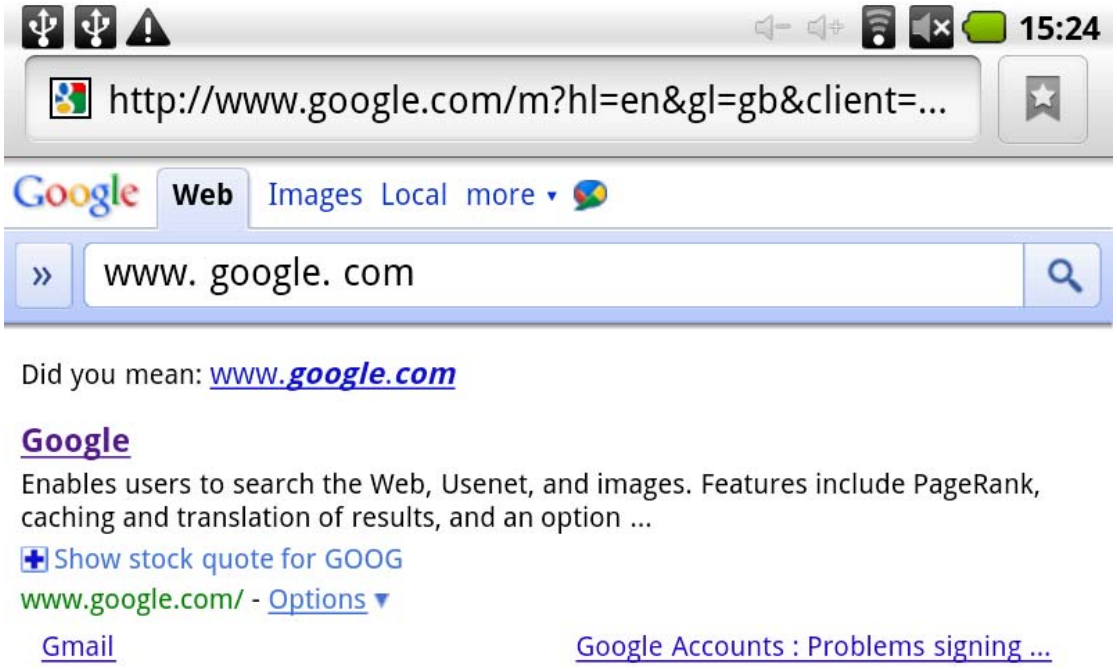

Free page can use the zoom controls zoom, as shown:

Online video:

Through "Android market" or other means to download online video player software, online TV player, online music software, then install to this machine. Open the

software installed, you can watch online video or online TV, listening to online radio stations.

Users can also download other third-party Web applications, including web browsing, video playback, Web client, instant messaging software, etc.

12. Music:

Click the main menu in the "music" icon; you can enter the music player interface. Here lists the system default user data area of all audio files. As shown below:

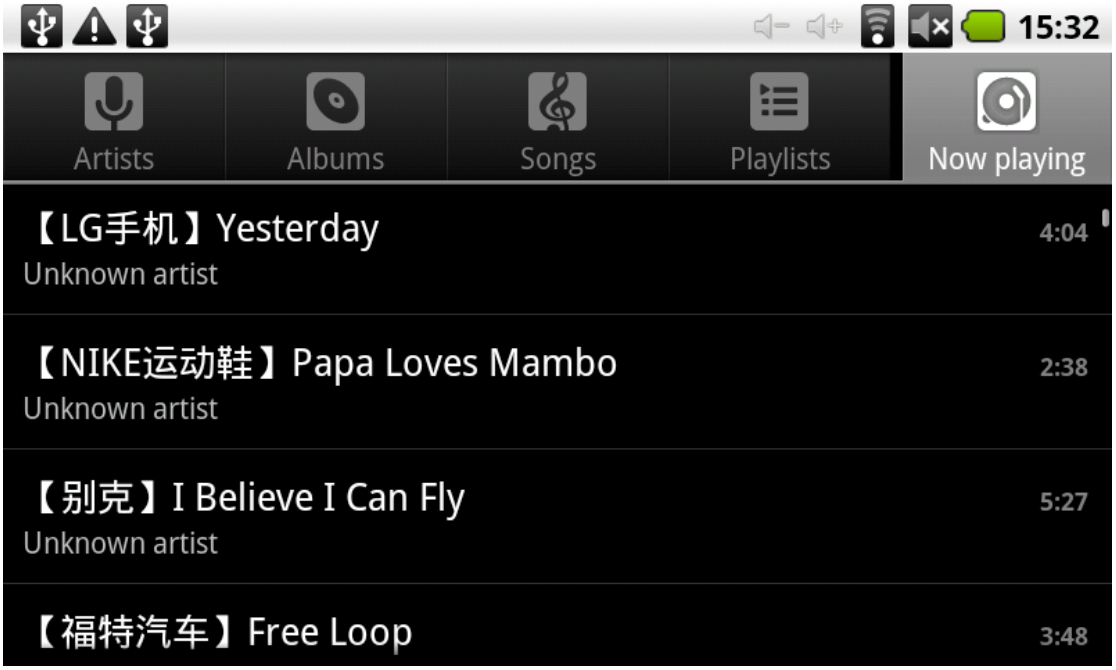

We can spread through the USB audio files synchronized manner, or by inserting the SD card with audio files were audio files, you can also download the audio files via the network.

Select the appropriate tab key; you can see for example "Artist", "album", "songs" and other interfaces. Select song to play.

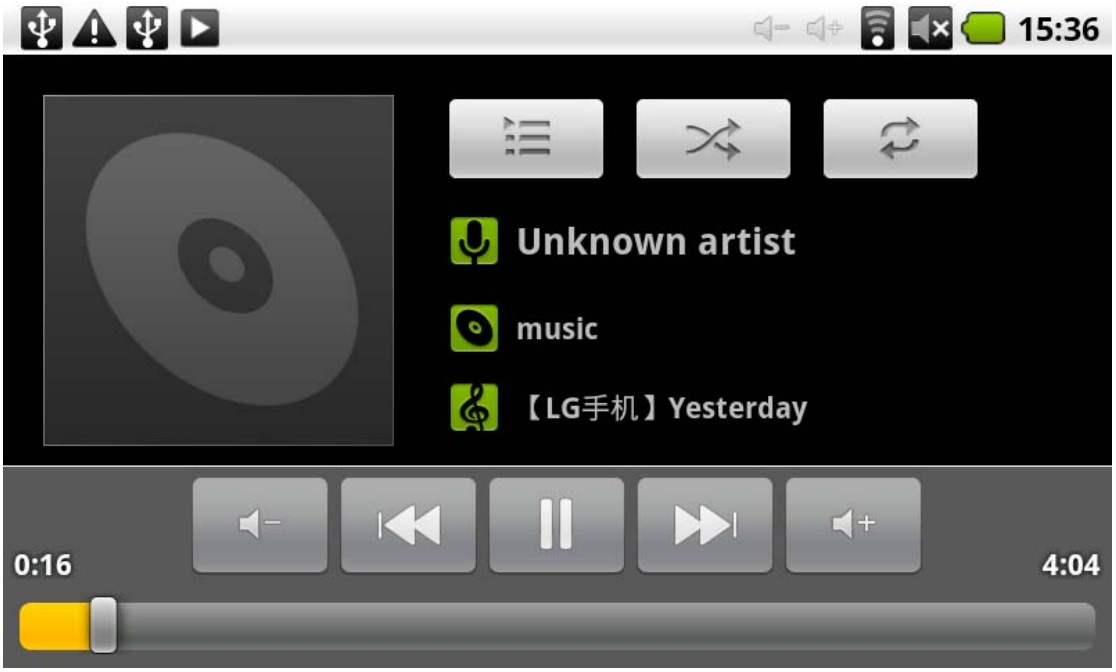

13. Video:

Click the main menu in the "gallery" into the "gallery" the main interface, there will list all the video files and picture files. As shown below:

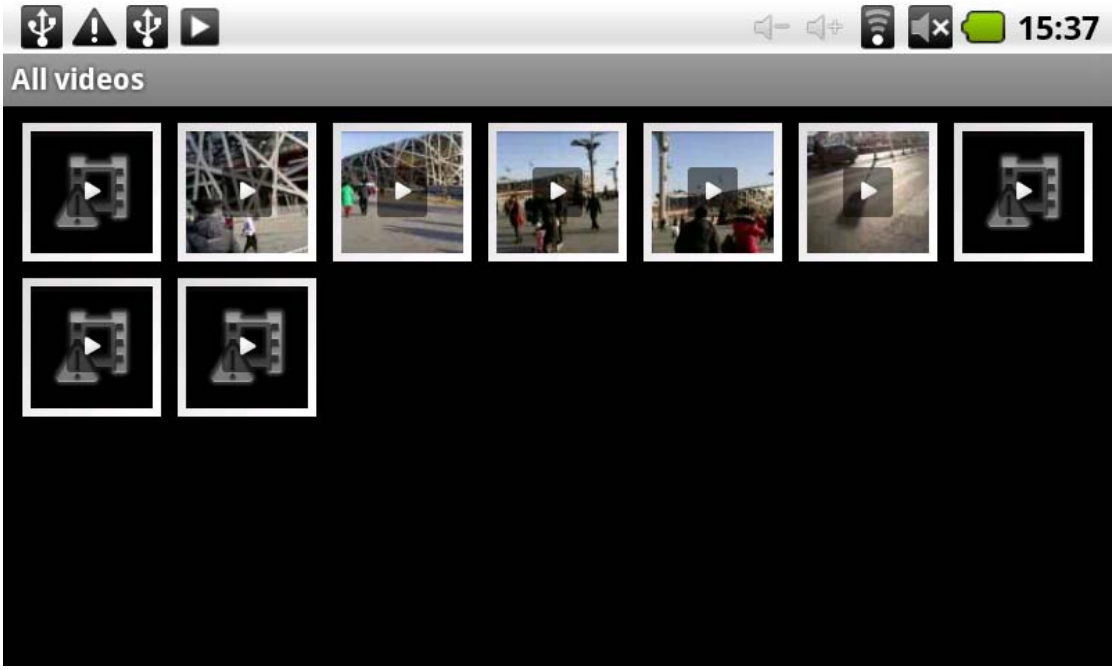

Select video file into the video player interface, as shown below. Can select "Play", "stop", "Volume +", "Volume -", "fast forward", "rewind", "progress bar" and control keys to control playback of the progress.

14. Picture Browse:

Click the main menu in the "gallery" into the "gallery" the main interface, there will list all the picture files and video files. As shown below:

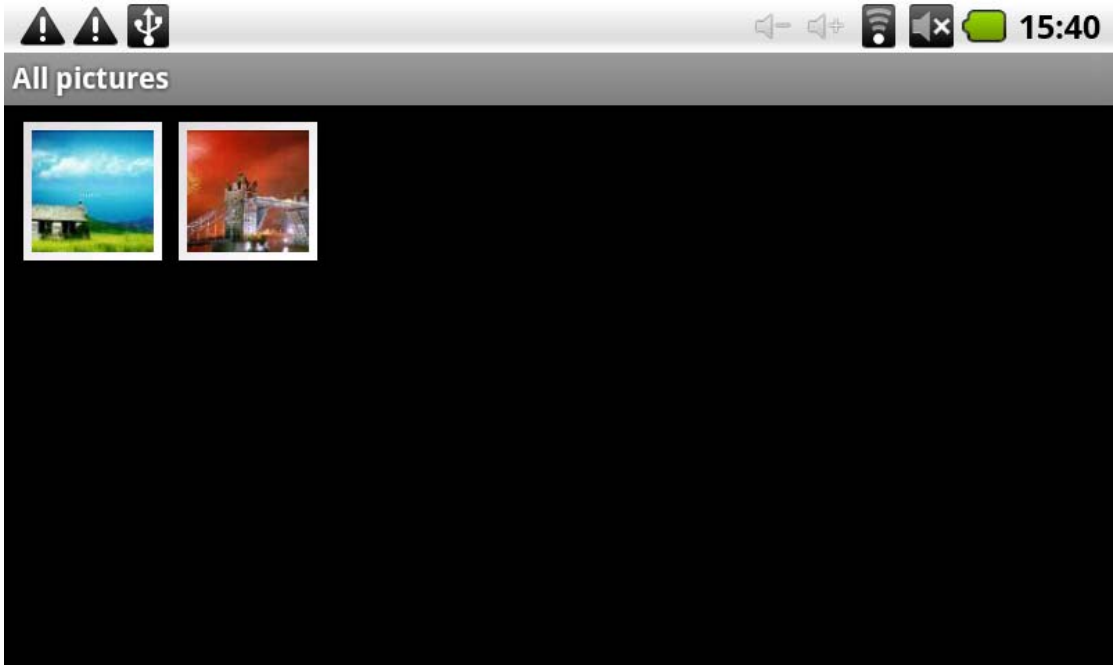

Select a picture file; enter the picture playback interface, as shown below. Can select "Zoom", "narrow" "sharing", "Previous" "Next," "set" and "delete" operation.

15. Wallpaper:

System supports static image wallpaper, as well as 3D wallpaper.

In the desktop interface, hold down the Menu button, pop-up menu option; select the "wallpaper", the pop-up "Choose wallpaper source" selection box:

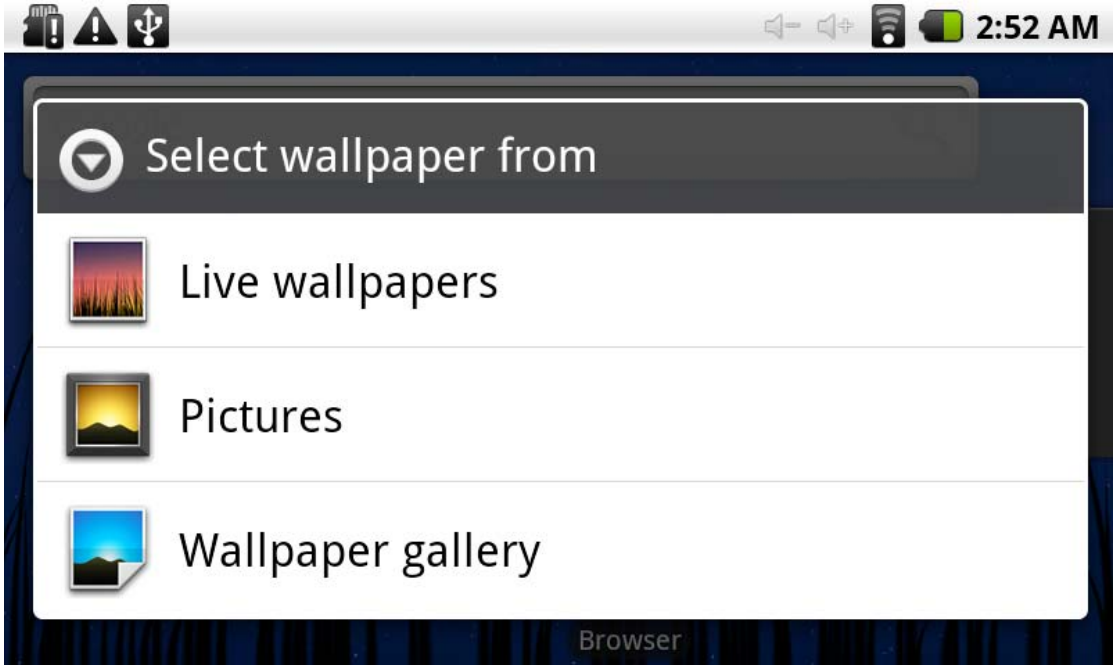

Have the following options:

Select "Wallpaper Gallery": You can select the system provides a static picture as wallpaper.

Select "Current Wallpaper": You can select the system provides 3D wallpaper.

Select "Photo": You can use the picture as wallpaper Customize.

16. Recording:

Click the main menu in the "recorder" icon into the "tape" the main interface. As shown below:

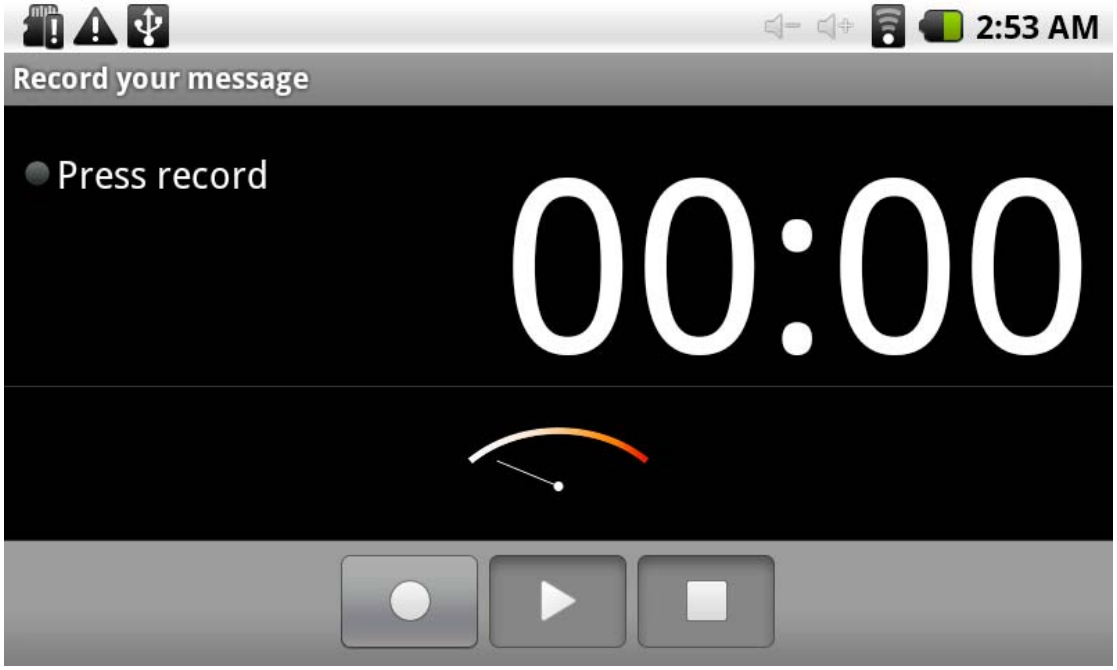

Note: when inserting SD card recording, audio file will be saved in the SD card.

Select "Record" button recording, recording is completed, select "Stop" button. At this point you can select the "Play" button plays the sound just recorded. Select "Use this record" button, save the recording, this can be found in the SD card in the appropriate recording documentation; if you do not save, you can select the "Discard" button.

17. E-mail client:

In the main menu, click "Email" icon to enter the e-mail client. The first entry will ask to configure the account information. As shown below:

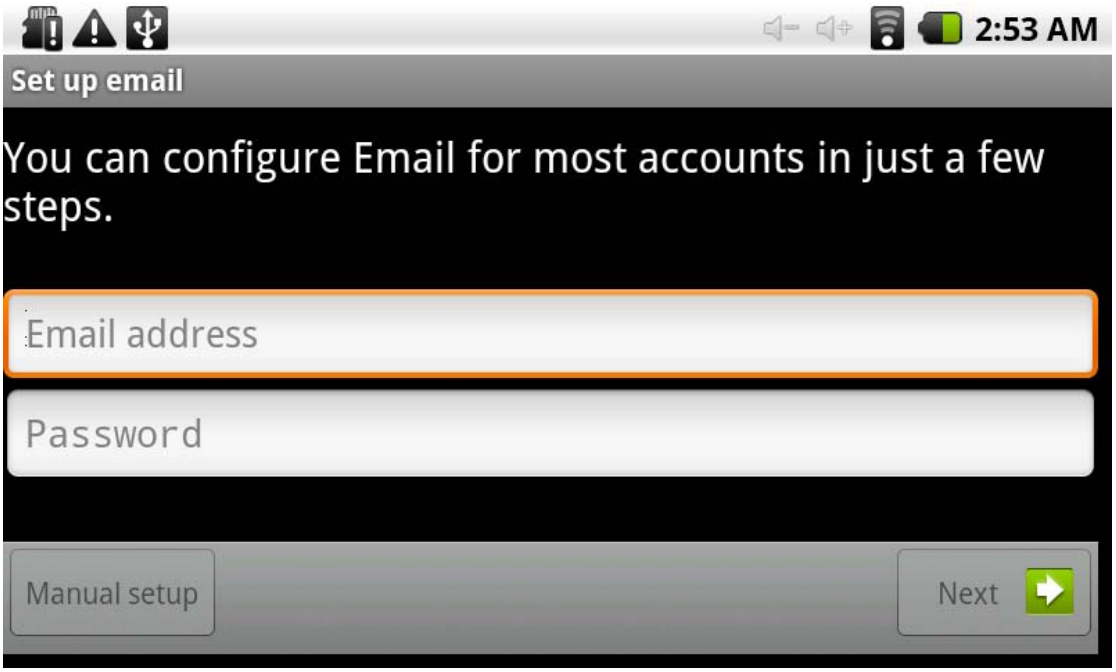

E-mail requires network support, please email links to ensure normal.

Here we dadahacker@126.com Case:

dadahacker@126.com(Enter the email address bar inside your valid e-mail address: dadahacker@126.com).

In the Password field enter your valid password: 123456789.

You can then select the "Next"; select the account type interface appears as shown below:

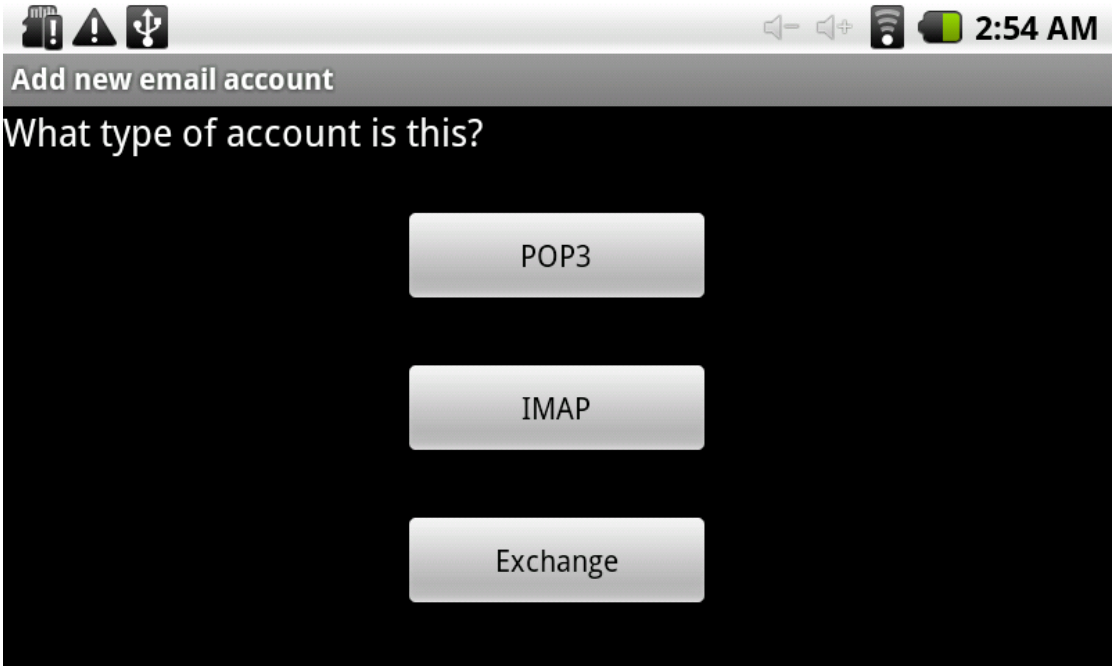

Here we are using a POP3 account type. Appears to accept the server after setting the interface as follows:

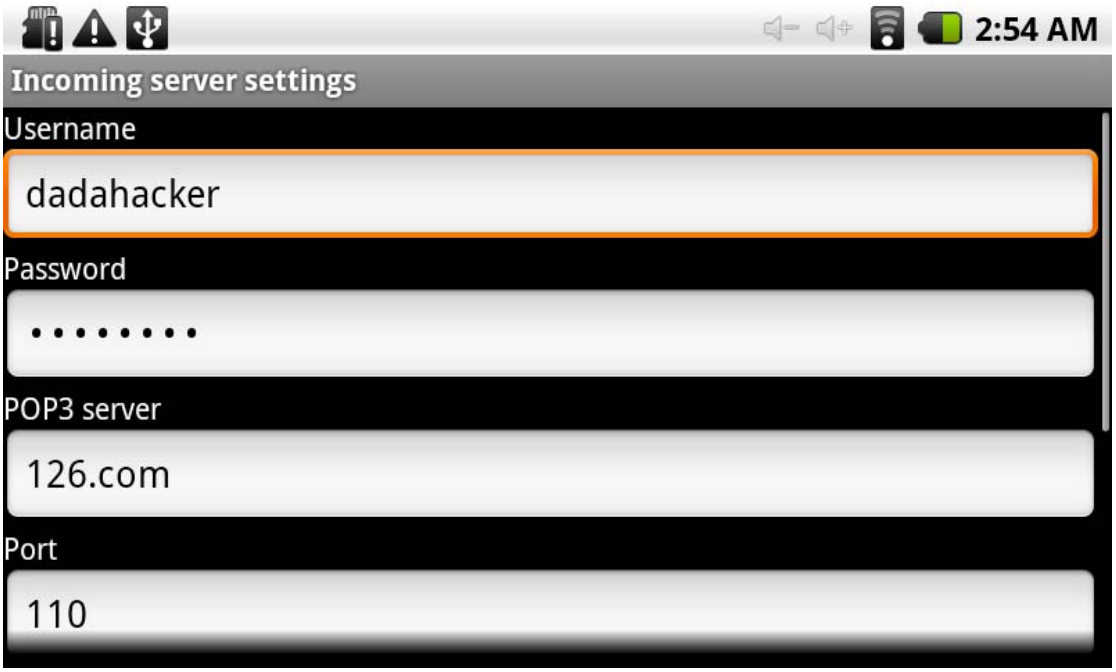

Please e-mail providers, each based on the information, set different parameters, such as:

POP3 server: The system default is "126.com", should be amended to "pop.126.com"

Port number "110"

Then select "Next", will enter the "Check to accept the server settings", if set correctly, there will be "outgoing server settings" interface as follows:

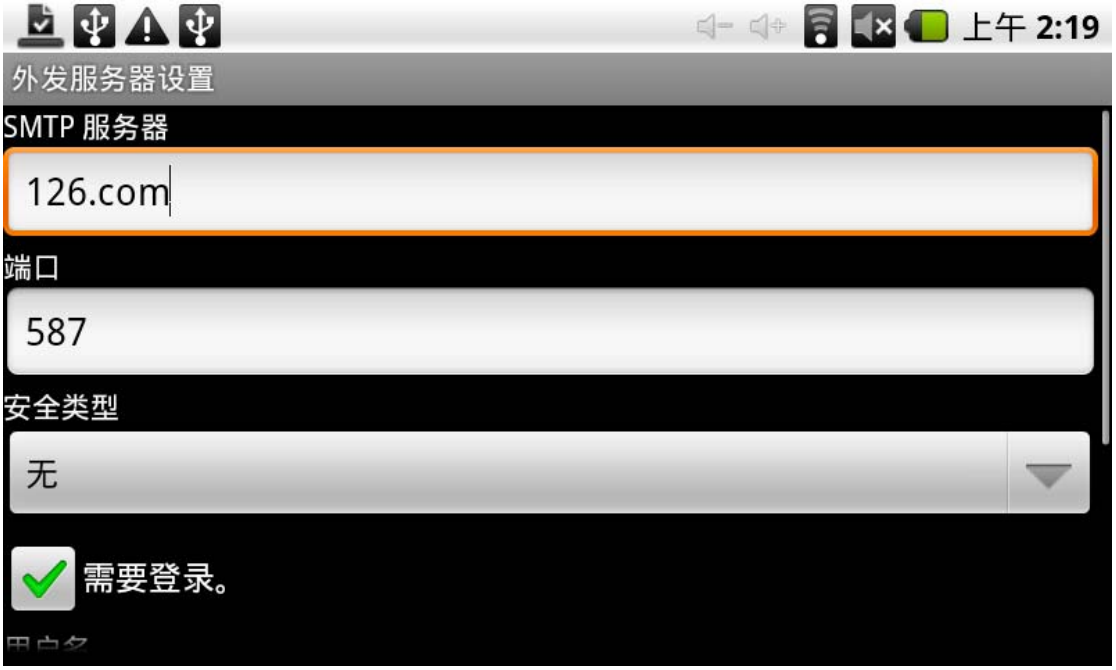

Set SMIP server "126.com" as "smtp.126.com"

Modify the port number "587" to "25"

Drag the scroll bar, select "Next" and enter "Check outgoing server settings" interface. If the settings are correct, will enter the following interface:

Select "Next", you can enter the account information to customize the interface:

In the "Your Name" enter the bar you want to show the name of outgoing mail, enter here: Rocky

Then click "Finish" button to enter the mail interface. It will automatically load the e-mail, mailing list below shows:

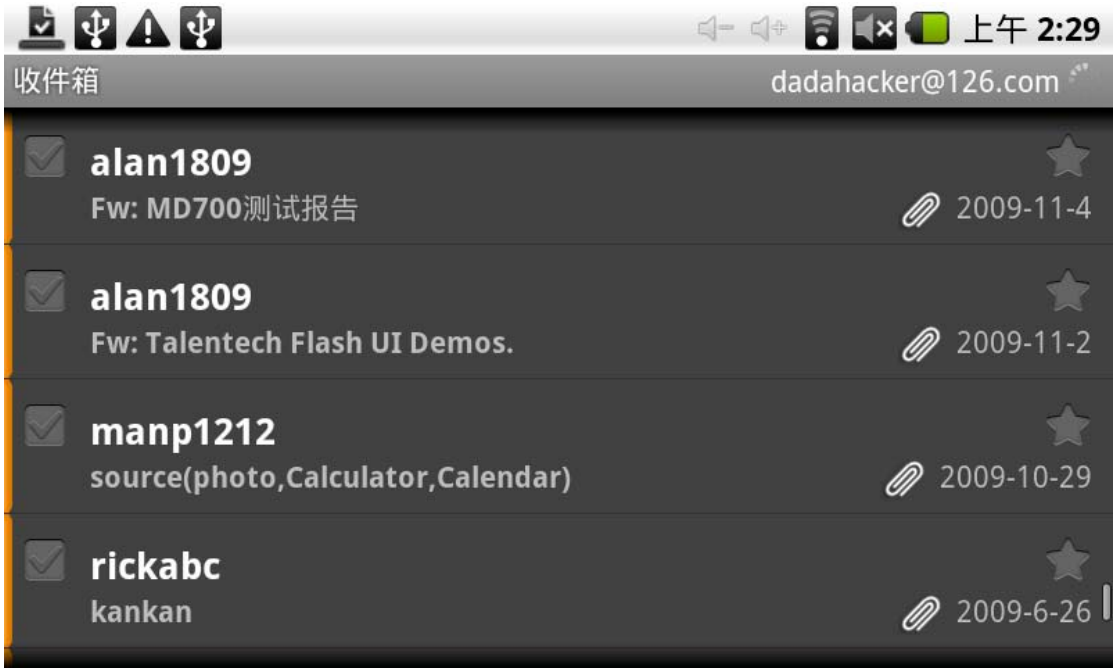

Select a column can view the messages; you can view the column inside a "reply", "delete", "Open attachment" and other operations.

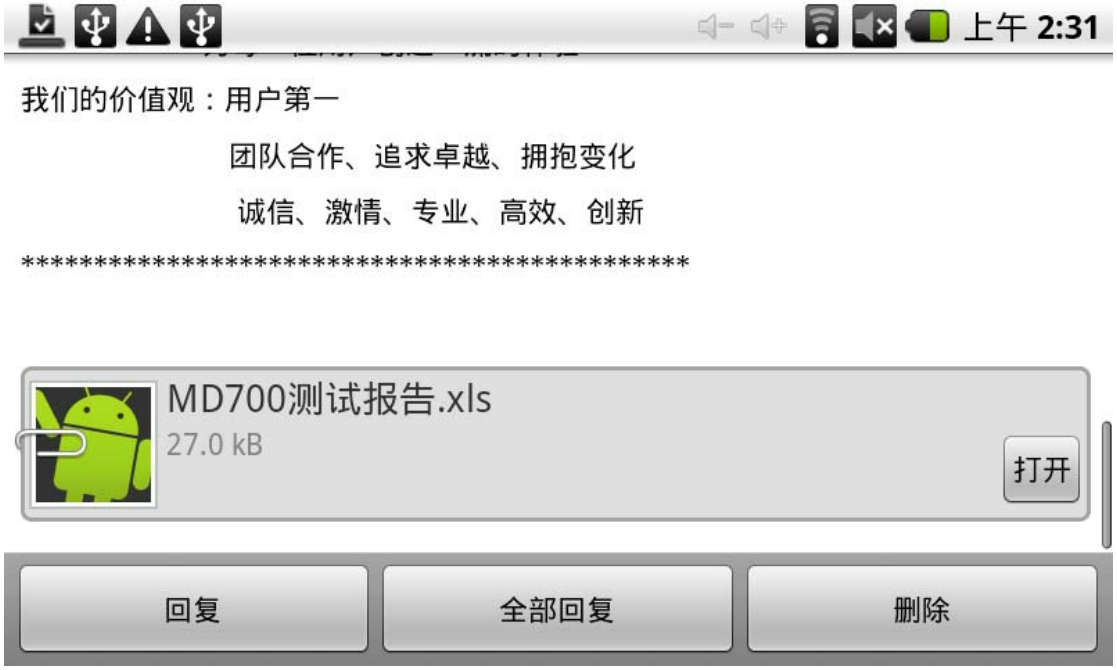

18. External devices:

*USB connection:

MID using the USB connection and PC, the default connection method is the synchronous mode. Can drag the status bar pulled down, there are interface:

"USB Connected (Internal)": that built-in memory.

"USB is connected": said external memory (SD card).

If you need to copy data using USB, you can select the load you need the memory, as:

15:56
Google
USB connected(Internal)
You have connected your device to your computer via USB. Select "Mount" if you want to copy files between your computer and your device's internal memory.
Mount
Don't mount

Loading is complete, you can see in the PC end of the corresponding letter.

*OTG use

Support the FAT32 format for mobile devices: for example, U disk, mobile hard drive.

Plug and Play connection method.

Use OTG cable MID 726 USB OTG port and external device.

Keyboard Mouse

Support plug and play USB mouse, keyboard equipment.

19. Frequently Asked Questions:

1: What is Android?

A: Android is Google on November 5, 2007 announced the open source Linux-based operating system name.

2: What is APK?

A: APK is Android Package acronym that Android installation package.

3: How to obtain the APK?

A: You can download via PC-side installation, you can also "Android market" online to download and install.

4: The machine operating system version?

A: This machine adopts Android2.1, built-in hardware 3D acceleration, can run Android applications market most.

5: The machine can charge through USB?

Answer: no. But the results can be powered through the USB implementation. Recommend the use of Accessories DC 9V adapter to charge.

Pictures for reference only, product appearance, functionality please prevail in kind; the product rules and design are subject to change without prior notice